
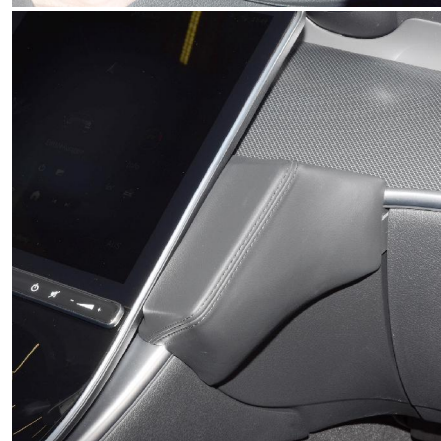


Art.-Nr.: **4110 / 4115**  
 item#

Mercedes C-Klasse (Typ W206 S206)  
 2021-

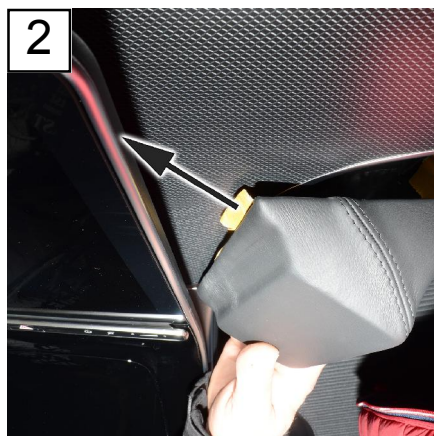

Deutsch

Unteres Blech einschieben.



English

Insert lower metal plate.



Français

Inserez la tôle inférieure.



Español

Introduzca la chapa inferior.



Dutch

Onderste metalen plaat ertussen schuiven.



Polski

Dolna blaszke wsucac.

Oberes Blech einschieben.

Insert upper metal plate.

Inserez la tôle supérieur.

Introduzca la chapa superior.

Bovenste plaat er tussen schuiven.

Wsunac gorna blaszke.

Innerhalb des Handschuhfaches die beiliegende Schraube in das rechte Blech eindrehen

Inside the glove box, screw the enclosed screw into the right-hand panel.

A l'intérieur de la boîte à gants, visser la vis jointe dans la tôle de droite

Dentro de la guantera, atornille el tornillo adjunto en el panel derecho.

Schroef de bijgevoegde schroef in het rechterpaneel van het dashboardkastje.

Wewnatrz schowka przykrec zalaczona srube do prawego panelu.